

# iSpeed for CG0600 pro

## *installation manual (CG0600 pro only)*


### STEALTH INSTALL (UNDERNEATH THE BIKE BATTERY)

---



**WARNING: Make sure your e-bike is turned off !**

1. Remove the bike battery with your key
2. Remove the cable cover (small hole on the top)
3. There are two connectors, disconnect the GREEN connector (the RED connector is for the light) \*
4. Connect the iSpeed blackbox to the two green connectors
5. Place the iSpeed black box with the sticker facing down, move the foam cable to the left and other cables to the right to create room
6. Push the cable cover back in place and install the battery

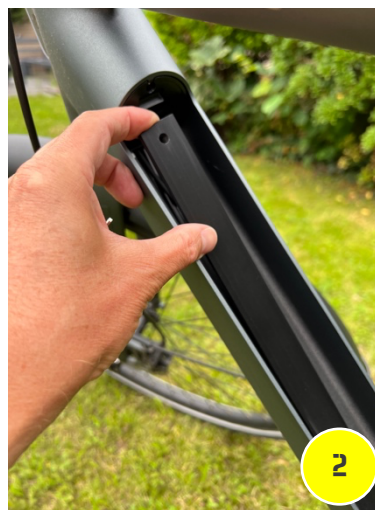

Version 1.3 Aug 23, 2024

\* For some bikes the connectors are hidden underneath the battery connect plate, loosen it to access the connectors. See pictures and steps on next page.



**WARNING: Following steps only needed if the connectors are hidden !**

- 3.1 Remove the battery connector plate by removing the 5 screws. (Pay attention to the location of the different screws)
- 3.2 You can now access the connectors and reinstall the connector plate.  
Tip: insert the key into the lock to make it easier to put it back into place.

